




MOVIE SCREEN EASY SET-UP GUIDE

CONTENTS:

- 1 Airblown® Inflatable Frame
- 1 Movie Screen™
- 8 Tether Stakes
- 8 Base Stakes
- 8 Nylon Tethers (4 long, 4 short)
- 1 Spare Fuse
- 1 Storage Bag



1 Airblown® Inflatable Frame

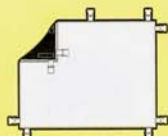

1 Movie Screen™



8 Tether Stakes (long)



8 Base Stakes (short)



4 Long Tethers



4 Short Tethers



1 Spare Fuse



1 Storage Bag



Remove contents from packaging and lay out deflated Airblown® Inflatable Movie Screen™ in a clear, flat area free of low overhangs such as trees, eaves or anything else that could puncture or damage your Airblown® Inflatable.




Ensure that your Airblown® Inflatable Frame is lying so that the side with the plastic clips and hook-and-loop patches is facing up.




While item is still lying flat, plug power cord into receptacle or other outlet device to inflate your Airblown® Inflatable Movie Screen™. This process may take a few minutes. Make sure the air intake is clear of fabric or other obstruction and zipper is fully closed.




Attach Movie Screen™ to frame by connecting the 18 clips on the corners and middle of screen, and by securing hook-and-loop patches along the back edges of the Movie Screen™. Locate the four metal legs on the bottom of the frame and unfold them completely.

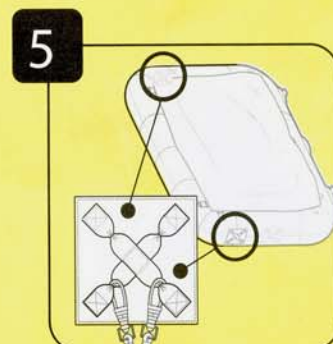

Tie ends of the 4 long nylon tethers to the upper "X"-shaped nylon strap on each side of the Airblown® Inflatable Movie Screen™.

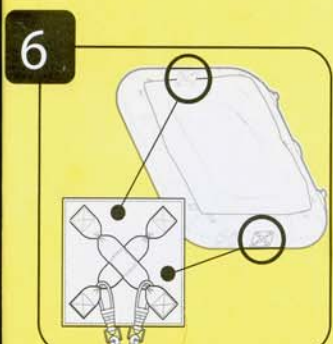

Tie ends of the 4 short nylon tethers to the lower "X"-shaped nylon strap on each side of the Airblown® Inflatable Movie Screen™.

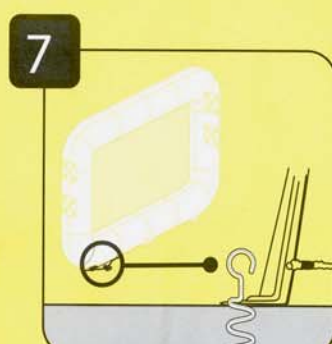

Stand the Airblown® Inflatable Movie Screen™ upright, ensuring that fans are located on the bottom. Locate the 8 small Base Stakes and screw them into the ground through the provided hole in each leg of the stands.



Insert the 8 tether stakes into ground and attach clips from nylon tethers to stakes, as shown.